

OWNER'S MANUAL
OXYGENE CD PLAYER



ROKSAN
OXYGENE

Introduction

Congratulations on your new Oxygene CD Player. You have made an excellent choice!

All ROKSAN products are designed, engineered and manufactured in United Kingdom and thoroughly tested before shipment in order to provide best musical satisfaction and lasting value. We have gone to every length to assure that this CD player will work with very little previous knowledge of the product so that you will be able to enjoy its musicality right away.

Nonetheless we recommend that you read these instructions carefully, as there are elements that should be acknowledged before you start using your new Oxygene CD Player.

Unpacking

Carefully lift the CD Player out of the box and make sure not to scratch the surfaces.

Please save the packaging in a dry place for future use. Should your unit require transporting it is strongly advised it is transported in the original packaging. Your warranty may be affected if alternative packaging is used and transport damage is caused due to inadequate packaging.

General Safety Precautions

Read instructions

All the safety and operating instructions should be read carefully before the unit is operated.

Retain Instructions

The safety and operating instructions should be retained for future reference.

Heed warnings

All warnings on the equipment and in the operating instructions should be adhered to.

Water and moisture

The unit should not be used near water – for example, near a bathtub, washbowl, kitchen sink, laundry machine, in a wet basement or near a swimming pool.

Heat

The unit should be situated away from heat sources such as radiators, heat registers, stoves, direct sunlight or other components that produce heat.

Ventilation

The unit should be situated so that its location or position does not interfere with its proper ventilation. For example, the unit should not be situated on a bed, sofa, rug, carpet, or similar surface that may block the ventilation openings, or placed in a built-in installation such as a book-case or closed cabinet that may impede the flow of air through the ventilation openings.

Object and liquid entry

Care should be taken so that objects do not fall, and liquids are not spilt into the enclosure openings.

Non-use periods

The power cord of the equipment should be unplugged from the mains outlet when left unused for a longer period of time – for instance for a vacation period.

Service and repairs

All service and repair work must be performed by a qualified technician, authorized by ROKSAN. The warranty will become void, if the unit has been modified or tampered with.

INSTALLATION

Installation

Keep power switched off when connecting or disconnecting the unit to other components. This will prevent unpleasant and loud noises coming from the loudspeakers and avoid the risk of damage to the equipment.

Analogue Outputs

The Oxygene CD Player has left and right channel analogue outputs via RCA connectors. Use these outputs for connection to an integrated amplifier or preamplifier.

Digital Outputs

There are two digital outputs on the Oxygene CD Player - one via an RCA type connector and the other via a TOSLINK type connector. If you wish to use the

Oxygene CD Player with a separate D/A converter, connect this to either the RCA socket or the TOSLINK socket. DO NOT connect to both sockets at the same time as this could degrade sound quality.

Power cord

The separate power cord supplied connects to the 3-pin power socket on the rear panel. Make all connections before fitting the mains power cord.

ON/OFF

Press the ON/OFF button on the back of the Oxygene CD Player to power it up.

Standby

You will notice that the Oxygene products do not have a standby function. This is because we constantly strive to make our products as environment – friendly as possible; and the best way to save on electricity is to turn off the unit when not in use. Furthermore, as stated these units do not require a warm up time.

Many audio products require a long warm up period in order to perform at their best. This is not the case with the Oxygene series, since these units have been designed using the latest digital technology.

Mains Voltage

The correct AC mains voltage is printed on the label situated on the bottom of the unit. Make sure your AC mains voltage is for a specific voltage and will only work with that voltage ($\pm 10\%$).

Three versions of the Oxygene CD players are available:

100 V 50/60Hz, 120 V 50/60 Hz and 230V 50/60Hz.

In case you move to a country that has a different AC supply voltage, contact your Roksan authorized distributor, for a professional conversion to the new supply voltage.

Cables

Use the ROKSAN interconnect cables. We cannot emphasize this enough. As better components and systems are developed, it becomes increasingly important to avoid the limitations of inferior system interconnections.

OPERATION

“LESS IS MORE”

The Oxygene CD Player has 3 hidden switches incorporated in the words “LESS IS MORE” on top of the cabinet. These three switches/words control all basic functions of the CD Player.




LESS IS MORE

- | | |
|-------|---|
| PLAY | Insert a new CD or press “MORE” if there is already a CD in the player. |
| STOP | Press “IS” for more than one second. |
| EJECT | Press “IS” one when the CD is not playing or press “IS” twice successively during playback. |
| PAUSE | Press “IS” during playback. Press “IS” again to resume playback. |

Please note that there is more than one different functions hidden behind every word and in some cases two words must be pressed simultaneously in order to activate the desired function. You’ll get familiar with the various commands after just a few minutes. All functions can also be accessed via the Oxygene remote control (please refer to the section about the Oxygene remote control unit).

Oxygene Remote Control Unit

Controls both the CD Player and the Integrated Amplifier

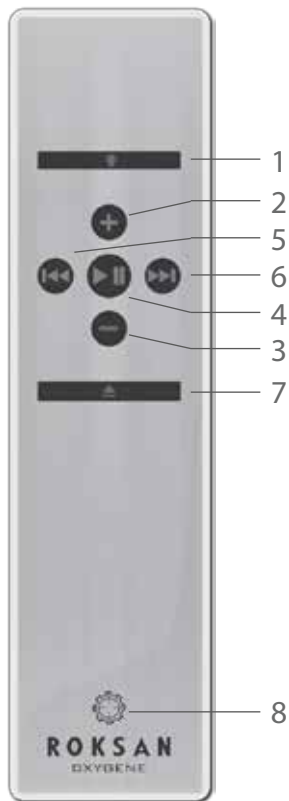

Functions

- 1 Press to adjust the intensity of the display light
:Bright, Dim & Light Off
- 2 Volume UP
- 3 Volume DOWN
- 4 PLAY & PAUSE
- 5 Previous track & Fast reverse
- 6 Next track & Fast Forward
- 7 EJECT
- 8 INPUT SELECT (Line1,2,3 & BT)

Insert Disc

When a disc is inserted, the TOC(table of content) will be recognized, but not displayed, and track no.1 will start playing. Track number and elapsed time will be displayed.

General

If the unit is set to Pause, Stop or Eject this will read in the display for 3 seconds at maximum light strength.

Tracks will read 1, 2, 3 and so forth – minutes and seconds will read 1:01 etc. If no disc is present in the slot drive, the display will read “NO DISC” whenever the unit is turned on.



LESS IS MORE

REPEAT

Press “LESS” AND “MORE” simultaneously for more than one second. Press both buttons again to turn off repeat mode.

NEXT TRACK

Press “MORE” once.

PREVIOUS TRACK

Press “LESS” once.

FAST FORWARD

Press “MORE” for more than one second.

FAST BACKWARD

Press “LESS” for more than one second.

Recommendations

Allow your new Oxygene CD Player a reasonable break in period. Although it delivers outstanding performance straight out of the box, you should expect to hear sonic improvements as the electronic components are broken in. This may take several days, but the performance will be quite constant afterwards.

General

Remote Receiver

The remote receiver is located behind the 3 small holes on the front top right corner of either amplifier or CD player.

Display and Dimmer

The Oxygene display has three brightness positions; Bright, Dim & Light off.

When selecting any functions either by remote control or touch of "LESS", "IS" or "MORE" on the unit, the display will go bright to acknowledge contact allowing for functions to be selected. The dot-matrix display will appropriately show "VOLUME" or "LINE INPUT".

WARRANTY

Your ROKSAN Product is guaranteed against any defect in materials and workmanship for a period of two (2) years from the date of purchase or first use whichever is earlier. This guarantee only becomes effective once your product has been registered at Roksan within fourteen (14) days of purchase. ROKSAN reserves the right to ask for a copy of your purchase invoice.

This guarantee excludes:

- Damage caused due to accident, misuse, neglect and incorrect installation, adjustment or repair.
- Liability for damage or loss during transit from the retailer or purchaser to ROKSAN or its authorised distributor for the purposes of repair or inspection.

Warranty repair processes and conditions:

- Carriage costs to ROKSAN shall be borne by the consignor.
- All claims under this warranty must be made through an authorised ROKSAN retailer. If equipment returned for repair to ROKSAN is found on inspection to comply with the product specification ROKSAN reserves the right to make a charge for examination and return carriage.
- Unauthorised servicing will void this guarantee.
- Warranty will only be valid when the product is bought through a ROKSAN authorized retailer.
- All the warranty issues will be dealt with through the selling retailer and or market distributor.

This warranty is subject to the following conditions and limitations:

- The warranty is void and inapplicable if the product has been used or handled other than in accordance with the instructions in the owner's manual, abused, misused or damaged by accident, neglect or while being transported, or the defect is due to the product being repaired or tampered with by anyone other than ROKSAN or an authorized ROKSAN repair centre or retailer.

- The product must be packed properly using the original shipping carton, and returned to ROKSAN or an authorized ROKSAN repair centre. Before shipping a product to ROKSAN a return authorisation reference must be obtained from ROKSAN.
- A written description of the defect and photocopy of the original purchase receipt must also accompany a returned product.
- If these terms are not fulfilled, ROKSAN will not cover the repair costs.

Visit : <http://www.roksan.co.uk/rw.php> for warranty registration.

In case of difficulty Call: +44 (0)20 8900 6801

SPECIFICATIONS

Oxygene CD Player

D/A - CONVERTER	24 – bit/192kHz
Analogue output	Single ended via RCA
Digital outputs	Coaxial and optical
Signal to noise ratio	Better than 100 dB (A – weighted)
Total harmonic distortion	Better than 0.002% @ 1 kHz
Maximum output	2.3 Vrms (1 kHz @ 0 Db)
Mains power	100 V / 120 V / 230 V at 50 Hz
Power consumption at idle	8.2 watt
Max. power consumption	12 watt
Dimensions (WxDxH)	12 x 12 x 2.3 inches (31 x 31 x 6 cm)
Weight (Net)	4 kg (9 lbs)

All specifications are liable to change without prior notice. E&OE

Miscellaneous

Any implied warranties relating to the above product shall be limited to the duration of this warranty. This warranty does not extend to any incidental or consequential costs or damages to the purchaser.

Notice

ROKSAN reserves the right to modify the design of any product without obligation to purchasers of previously manufactured products and to change the price and specifications of any product without notice or obligation to any person.

Roksan Audio Ltd

Jubilee Close

Townsend Lane

London NW9 8TR

T: +44 (0)20 8900 6801

F: +44 (0)20 82052644

E: info@roksan.co.uk

W: OXYGENE.ROKSANAUDIO.COM

